



"THE STICK" USB RFID READER



SIMPLY SCAN!

So simple anyone can use it. NO drivers, software, programming or complicated setup... simply plug The Stick into an available USB Port on most devices. The unique ChipID is automatically typed into the current application on your device.

Optimized to read small plug tags (<8mm) embedded in metal, plus other HF tags (ICode, etc.)

Stylus tip for use on various handhelds.

Comes with multiple cable options.

Works like a USB keyboard... simply scan to send the unique ChipID to the current application

InfoChip "The Stick" USB RFID Reader Specifications:

RFID	HF 13.56MHz including ICode, etc.
Read Mode	Read Only (ChipID/TagID/UID)
Operating Modes	USB Powered
Read Range	Up to 4cm
Size (mm)	84mm x 23.4mm x 10.2mm (3.30" x 0.92" x 0.40")

Part Number	RDR-HF-USBSTICK8
USB	Standard USB (cable included)
Compatibility	Most devices supporting USB HID keyboard profile incl. handhelds/laptops/tablets/desktops

Visit www.hollandnameplate.com to learn about the Holland RFID suite of tags, readers and more!
For pricing and details, please call 1-816-421-2553.

Holland RFID
(816) 421-2553

<https://hollandnameplate.com/holland-rfid/>